 


Tape

 
CASSETTE HEAD DEMAGNETIZER

Electronically reduces noise levels, restores lost output. Automatic, use with any cassette deck. Includes battery.

37TC

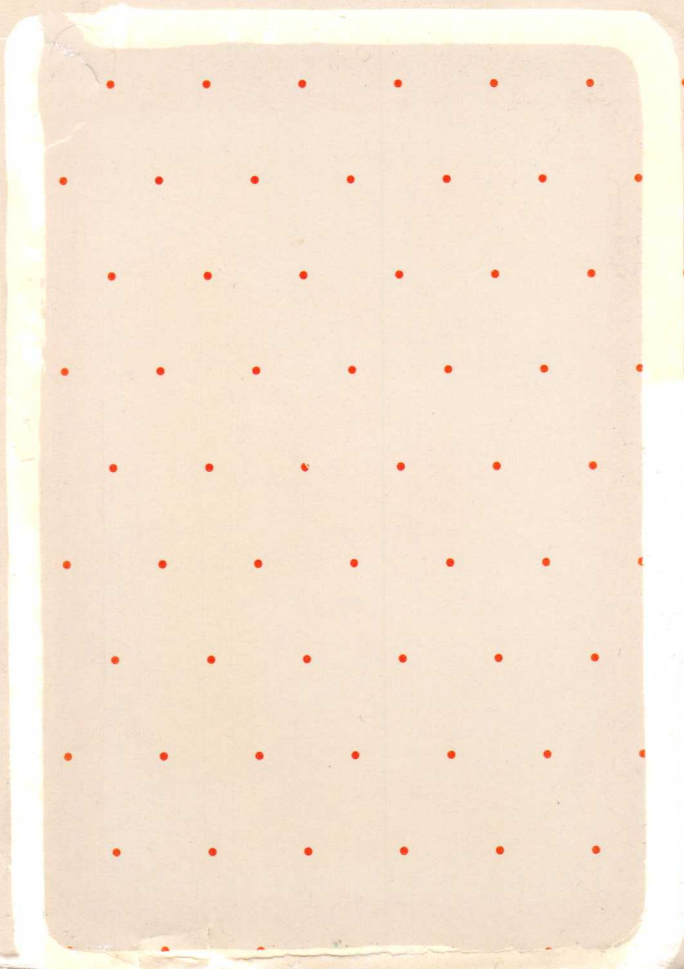

RECOTON®

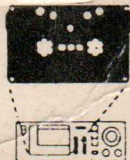

CASSETTE HEAD DEMAGNETIZER

PRODUCT USAGE:


Automatically demagnetizes cassette record/play back heads restoring lost output and reducing noise levels. Works with all cassette players/decks.

INSTRUCTIONS:

- 1 - Turn all volume controls to zero.
- 2 - Insert Head Demagnetizer unit into your player/deck as you would any normal cassette. LED must be facing up toward you.
- 3 - Press "play" mode on your player until the LED light goes out, or 10 seconds has elapsed.
- 4 - Press "stop" mode on your player, eject the demagnetizer.


HELPFUL HINTS:

- 1 - Use your demagnetizer after every 25 hours of play.
- 2 - If you cannot operate your controls without the power turned on, be sure to check that all speaker/headphone volume controls are set to zero/off.
- 3 - When LED light glows dimly, it is time to replace the battery. To replace battery, turn the unit over, slide battery cover off. Replace only with PX675 1.5V Mercury battery. Positive side (+) should face you when inserting new battery.

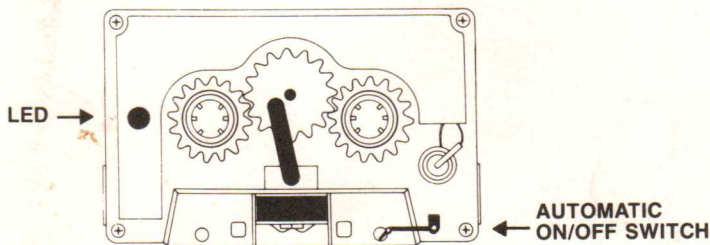

Ask for other fine Recoton audio products, including:

Cassette
Head Cleaner

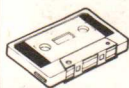

CD Stereo
Adapter



DC Adapter



Stereophone



Tape
Storage Box



RECOTON

Long Island City, NY 11101

Copyright 1992 Recoton Corp., LIC NY 11101.

Made in China. Printed in USA.

All rights reserved. All specifications subject to change without notice.



0 4410240037 5